


# Parts and Hardware Identification

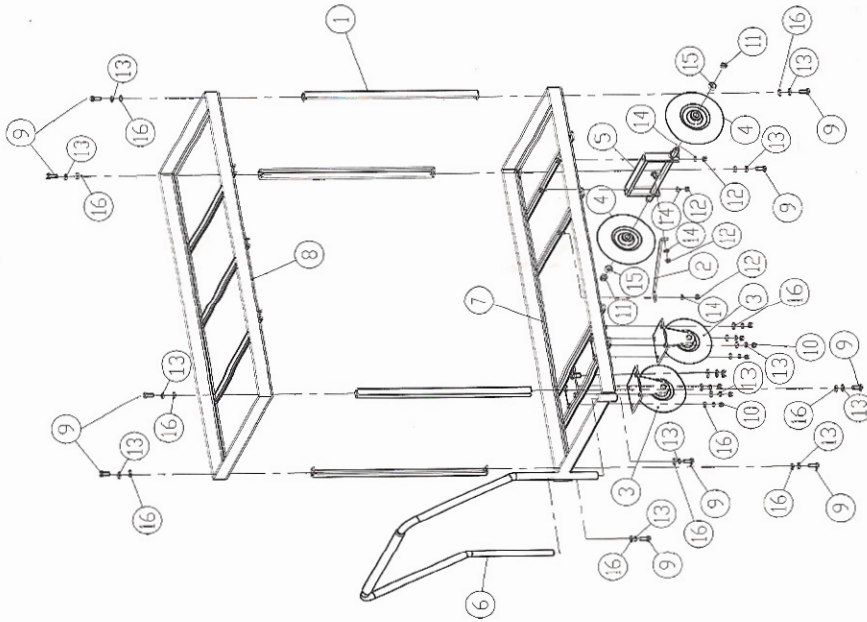

| Part No. | Part Description   | Q'ty | Part No. | Part Description   | Q'ty  |
|----------|--------------------|------|----------|--------------------|-------|
| 1        | Upright Brace      | 4pcs | 9        | M10*20 Bolt        | 10pcs |
| 2        | Connective Brace   | 1pc  | 10       | M10 Nut            | 10pcs |
| 3        | Front Swivel Wheel | 2pcs | 11       | M12 Lock Nut       | 2pcs  |
| 4        | Back Wheel         | 2pcs | 12       | M8 Lock Nut        | 4pcs  |
| 5        | Back Axle Frame    | 1pc  | 13       | Ø 10 Spring Washer | 18pcs |
| 6        | Handle             | 1pc  | 14       | Ø 8 Washer         | 4pcs  |
| 7        | Bottom Bed         | 1pc  | 15       | Ø 12 Washer        | 2pcs  |
| 8        | Upper Bed          | 1pc  | 16       | Ø 10 Washer        | 18pcs |

6056


# GARDEN CART

## Owner's Manual

Save this manual for future reference

### CAUTION:

Read, understand and follow ALL instructions before using this garden cart.

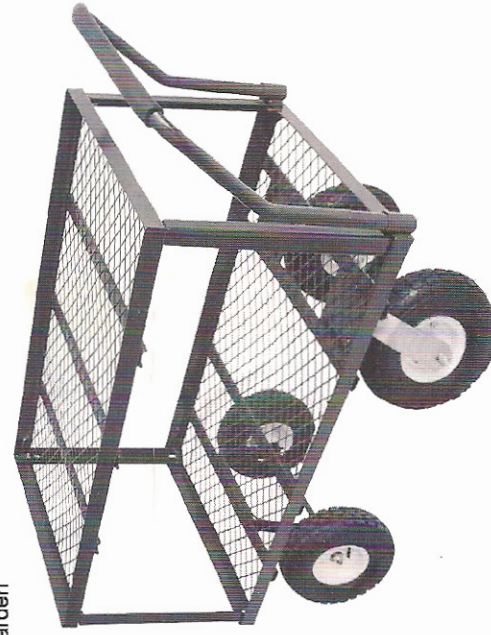


- Important Safety Instructions
- Assembly Instructions
- Parts and Hardware Identification

Q056

## Assembly Instructions


### Step 1.

Turn the Bottom bed (7) upside down. Use Nut (10), Washer (16) and Spring washer (13) to fix the Front swivel wheels (3) on the Bottom bed (7), tighten.

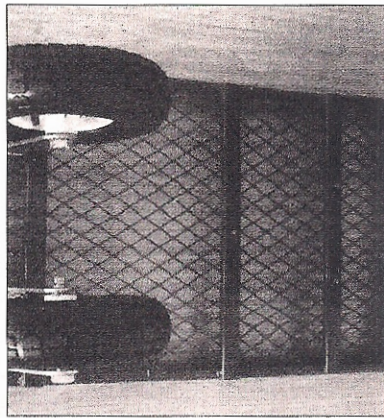


### Step 2.

Assemble the Back axle frame (5) on the Bottom bed (7) by M8 Locknut (12) and Washer (14), tighten.

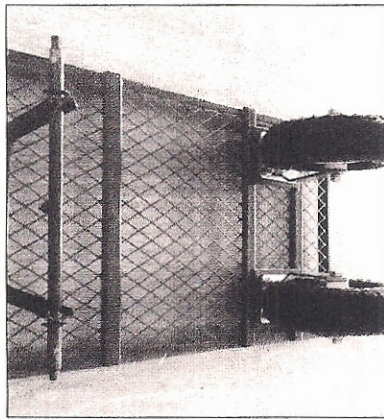


### Step 3.

Use M8 Locknut (12) and Washer (14) to fix the Connective brace (2) on the Back axle frame (5) and the Bottom bed (7), tighten. Then assemble the Back wheels (4) on the Back axle frame (5) with M12 Locknut (11) and Washer (15).

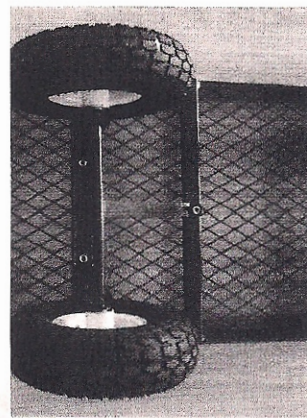

### Step 4.


Turn around the Bottom bed (7) and then assemble the Upright braces (1) on it with M10\*20 Bolt (9), Washer (16) and Spring washer (13), tighten.

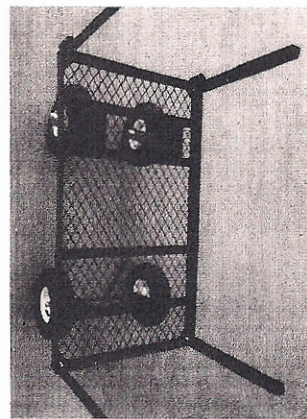

## Assembly Instructions


### Step 5.

Assemble the Upper bed (8) on the Upright braces (1) by M10\*20 Bolt (9), Washer (16) and Spring washer (13), tighten.

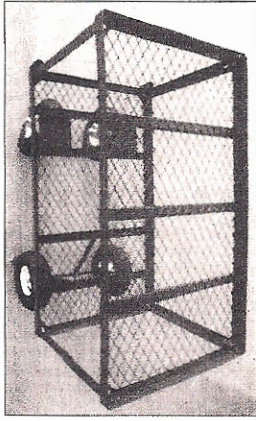

### Step 6.

Connect the Handle (6) to the Bottom bed (7) with M10\*20 Bolt (9), Washer (16) and Spring washer (13), tighten.

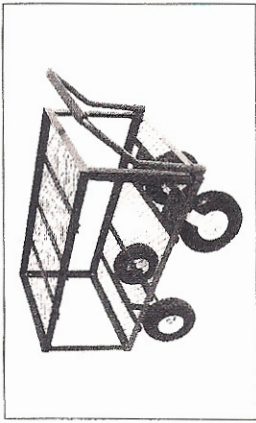

## IMPORTANT SAFETY INSTRUCTION

LOADING CAPACITY: 550LBS

DO NOT inflate tires more than 30 psi.  
DO NOT operate if any part is damaged or broken.  
Distribute load evenly in cart bed.  
DO NOT use on steep inclines where tipping may occur.  
NOT FOR USE BY CHILDREN.